



 
# VERSO Standard RHP Standard

Installation instructions for outdoor accessories

EN

VERSO STANDARD air handling units are not suitable to install in outdoor areas without additional modification.

Units intended be installed outdoor, should be fixed to the base frame and air dampers must be installed on to the duct connections. AHU must be protected from the weather influence by installing dedicated roof and hoods. If possible, it is recommended to install the unit near the walls for the extra protection from the wind.

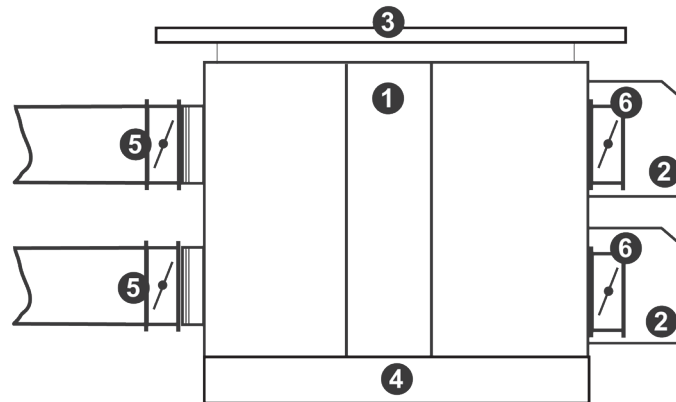

- 1 AHU
- 2 Hoods
- 3 Roof
- 4 Base frame
- 5 Air dampers on the room side (recomended)
- 6 Outdoor air closing dampers (mandatory)



 
- Connections of outdoor units must be additionally sealed (the sealant is not included).
- If the outdoor unit will be switched off during the cold season, supply and extract air ducts (on the indoor side) must be fitted with additional air shut-off dampers. They should prevent warm indoor air from circulating inside the unit when it is stopped to avoid condensation, which may be detrimental to electronic components.



- Air intake and outlet hoods must be installed as far apart as possible (for example by installing additional duct segments between AHU and hood), to prevent the exhaust air from returning to the air intakes.




MOUNTING OF THE BASE FRAME







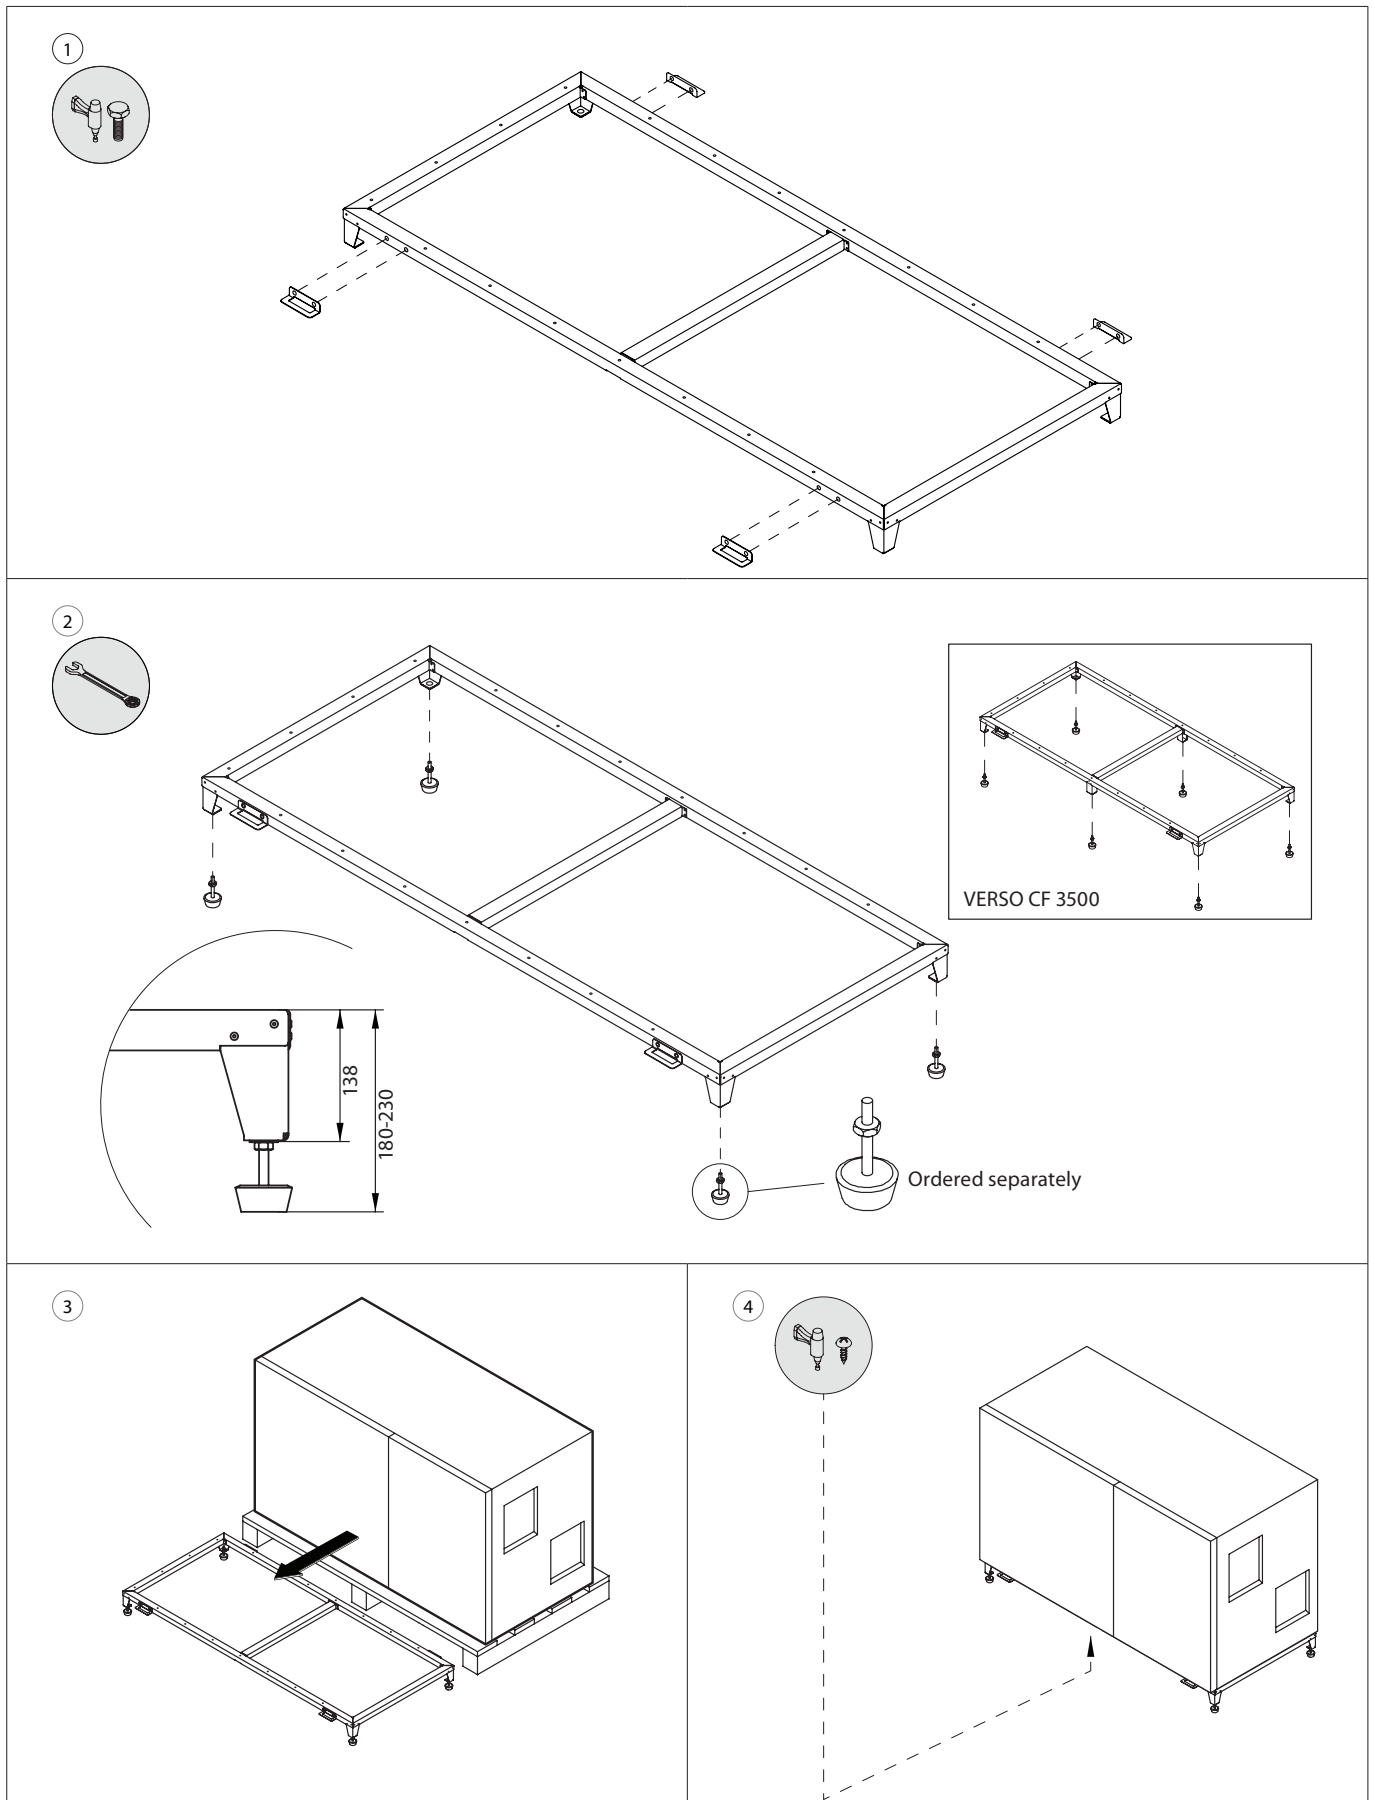


## MOUNTING OF THE ROOFS

 
Verso R 1000 - R 1300 - R 1500

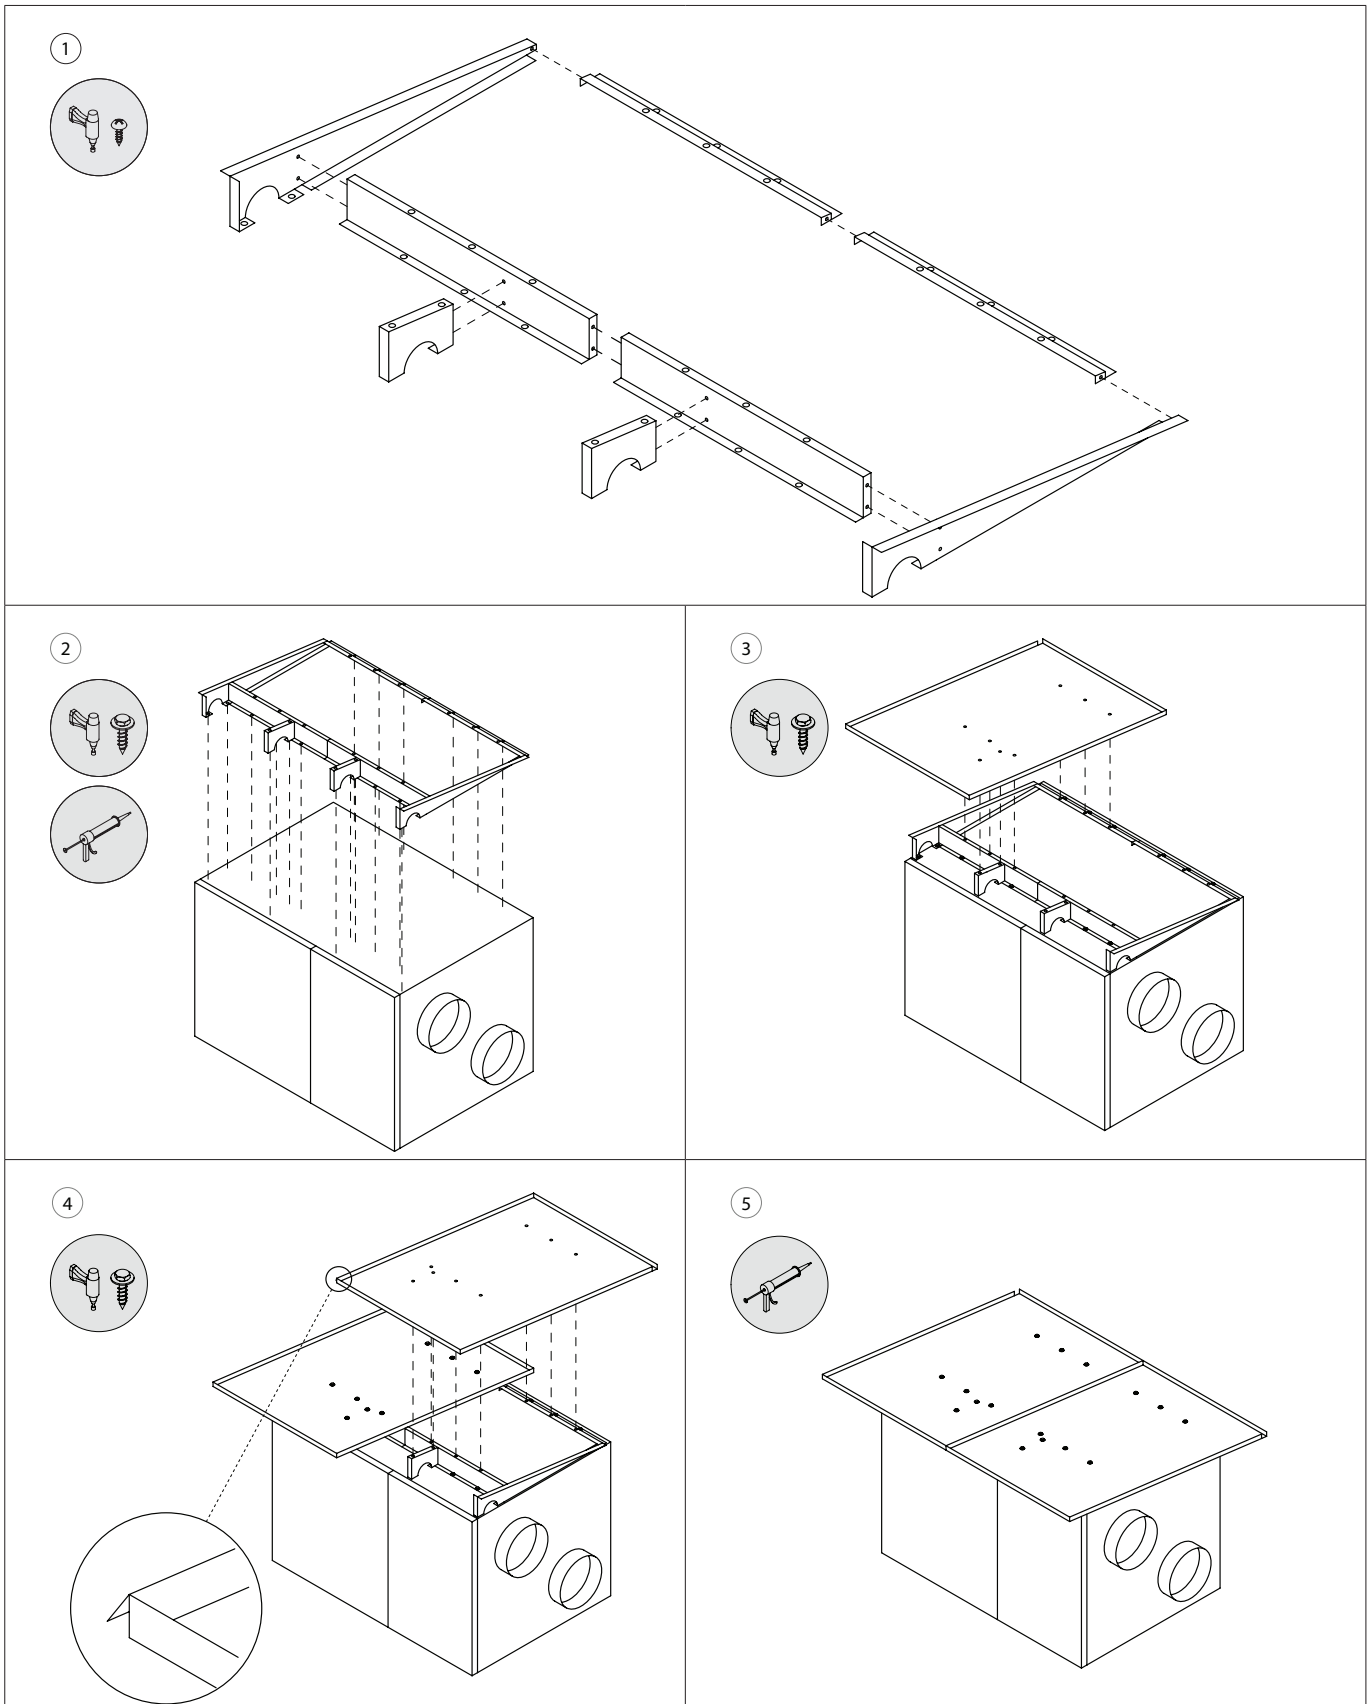

       
VERSO R 1700 - R 2000  
RHP 800 - 1300 - 1500

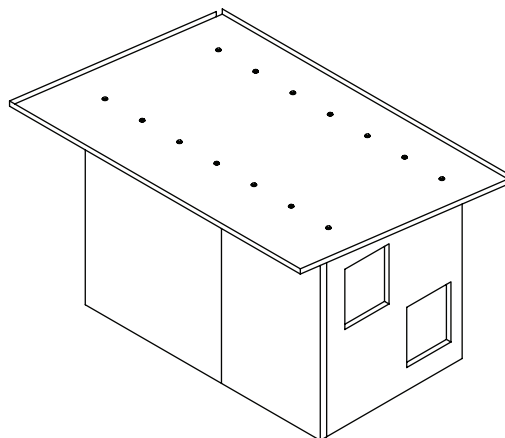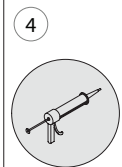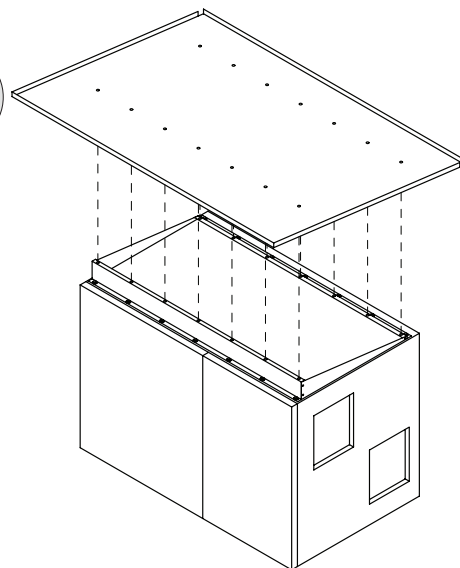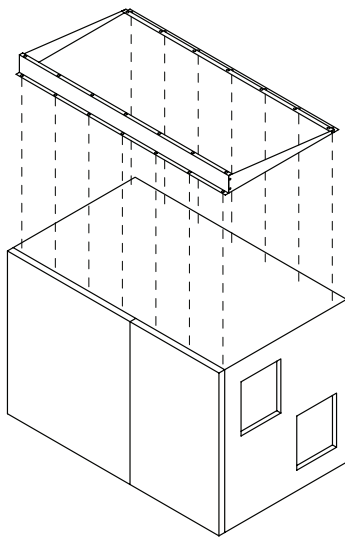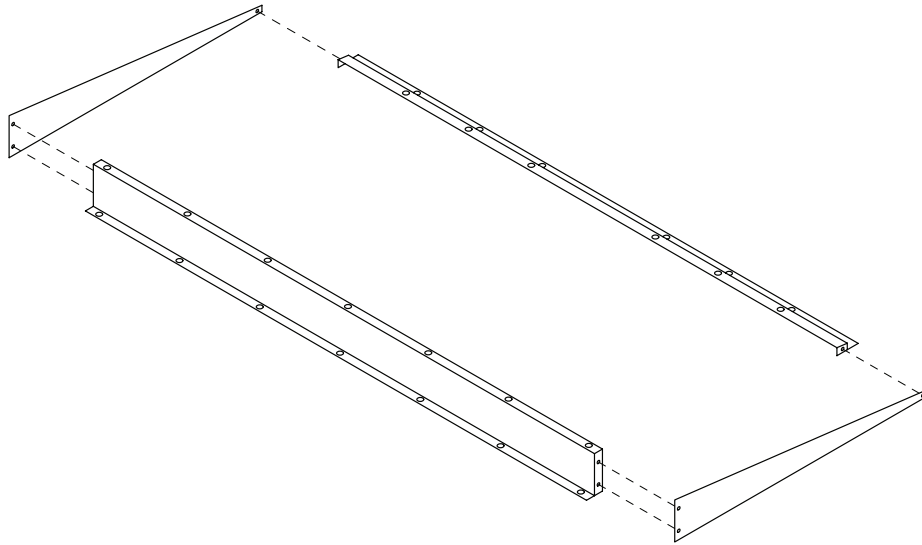


Verso R 2500 - R 5000 - R 7000

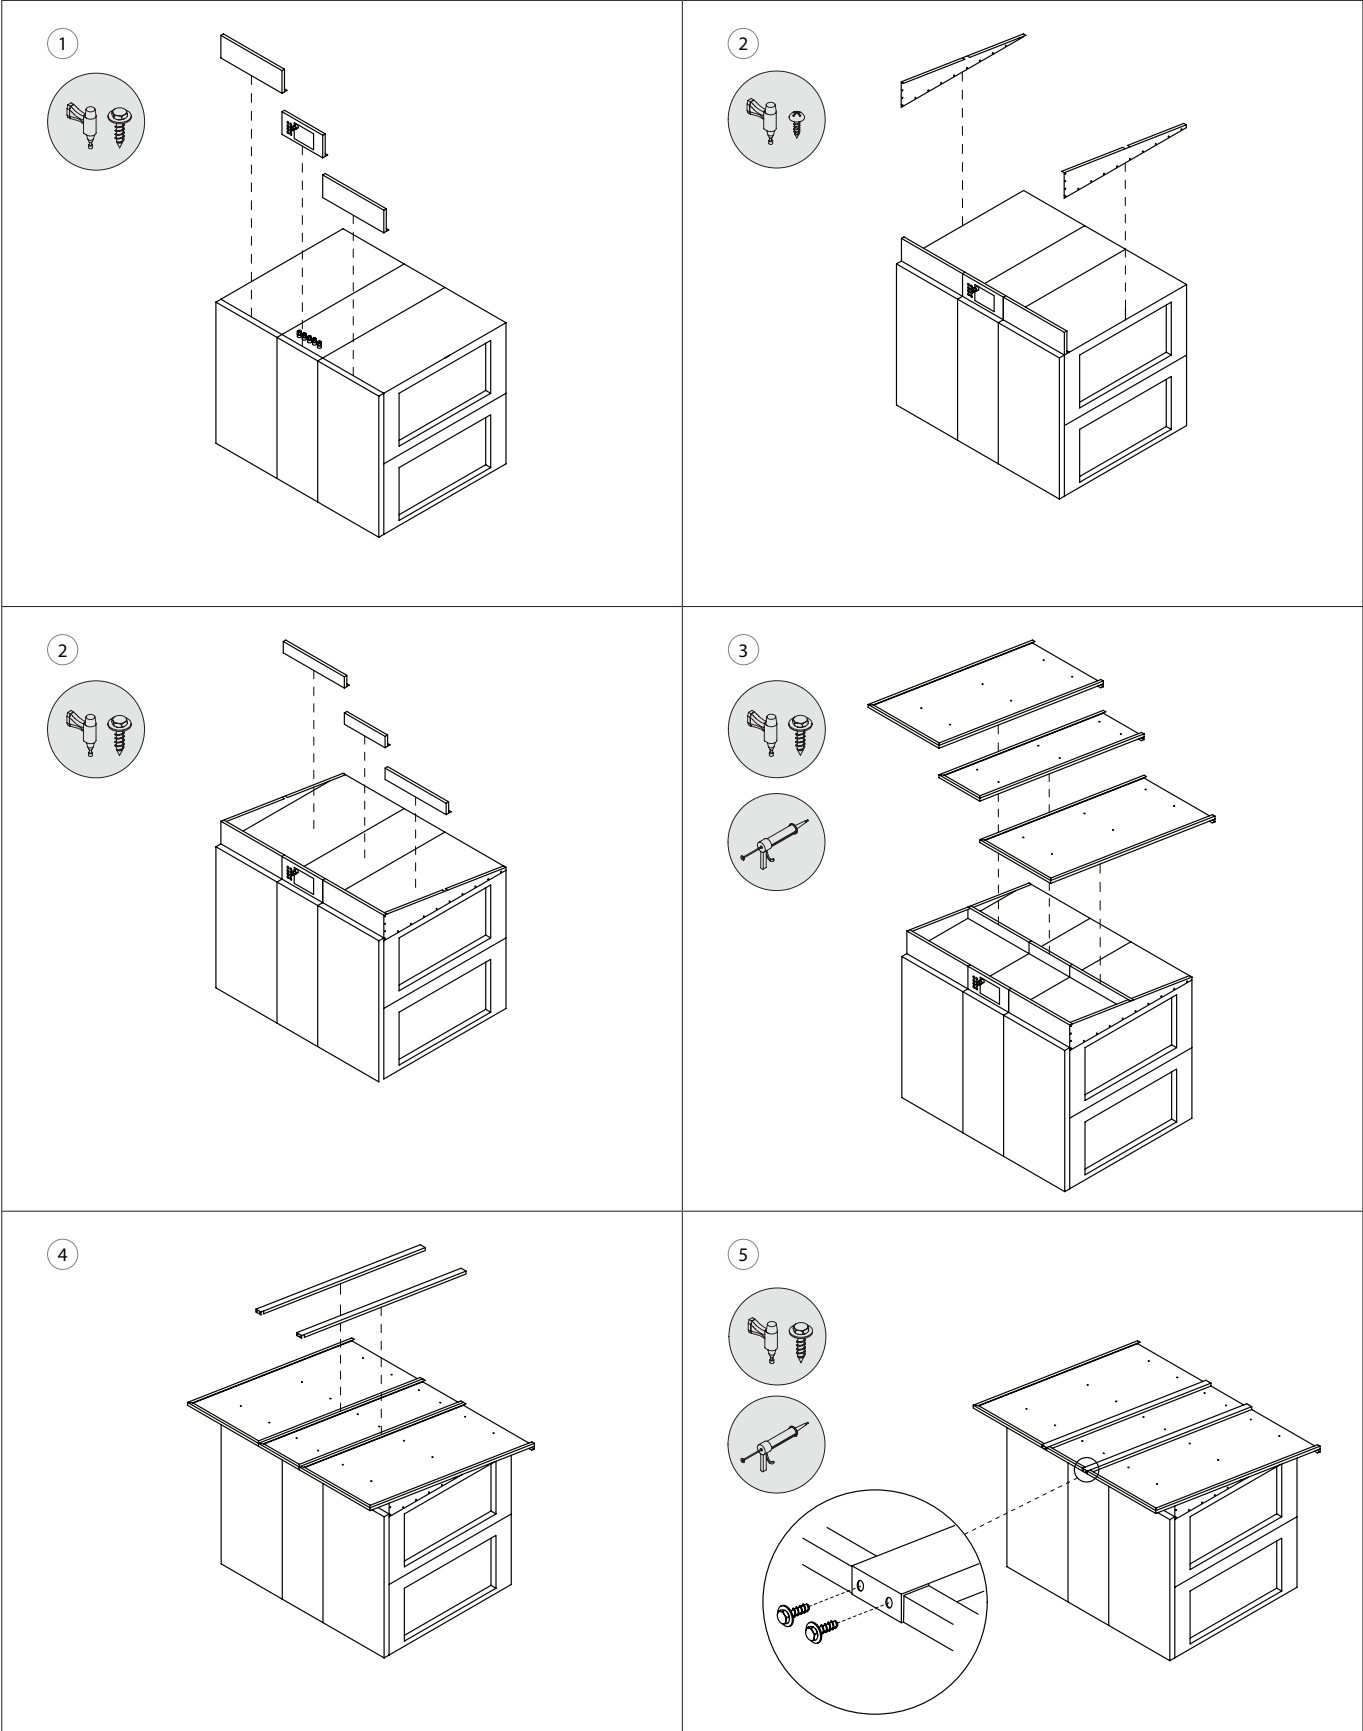 


Verso R 3000 - R 4000

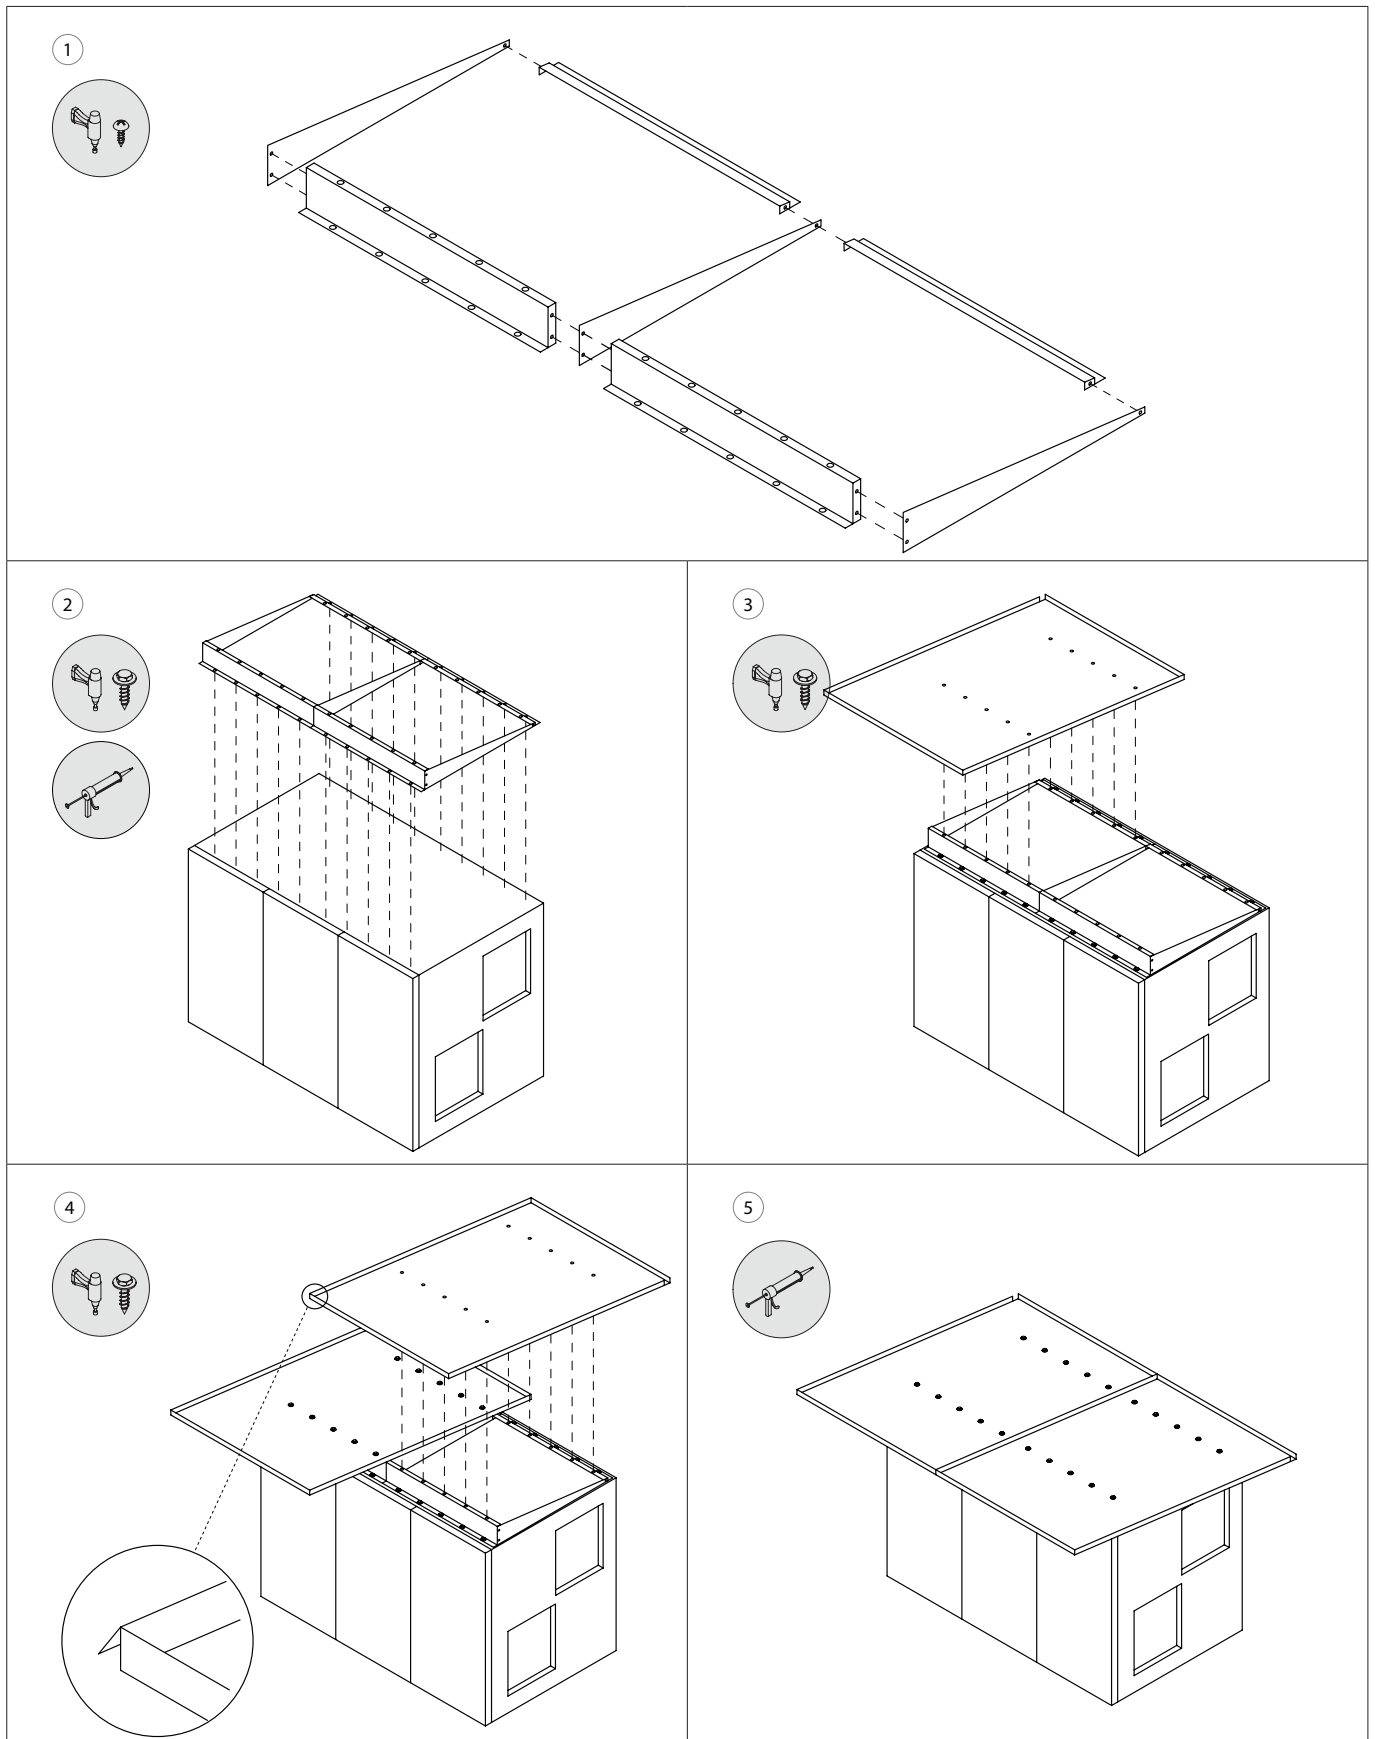 


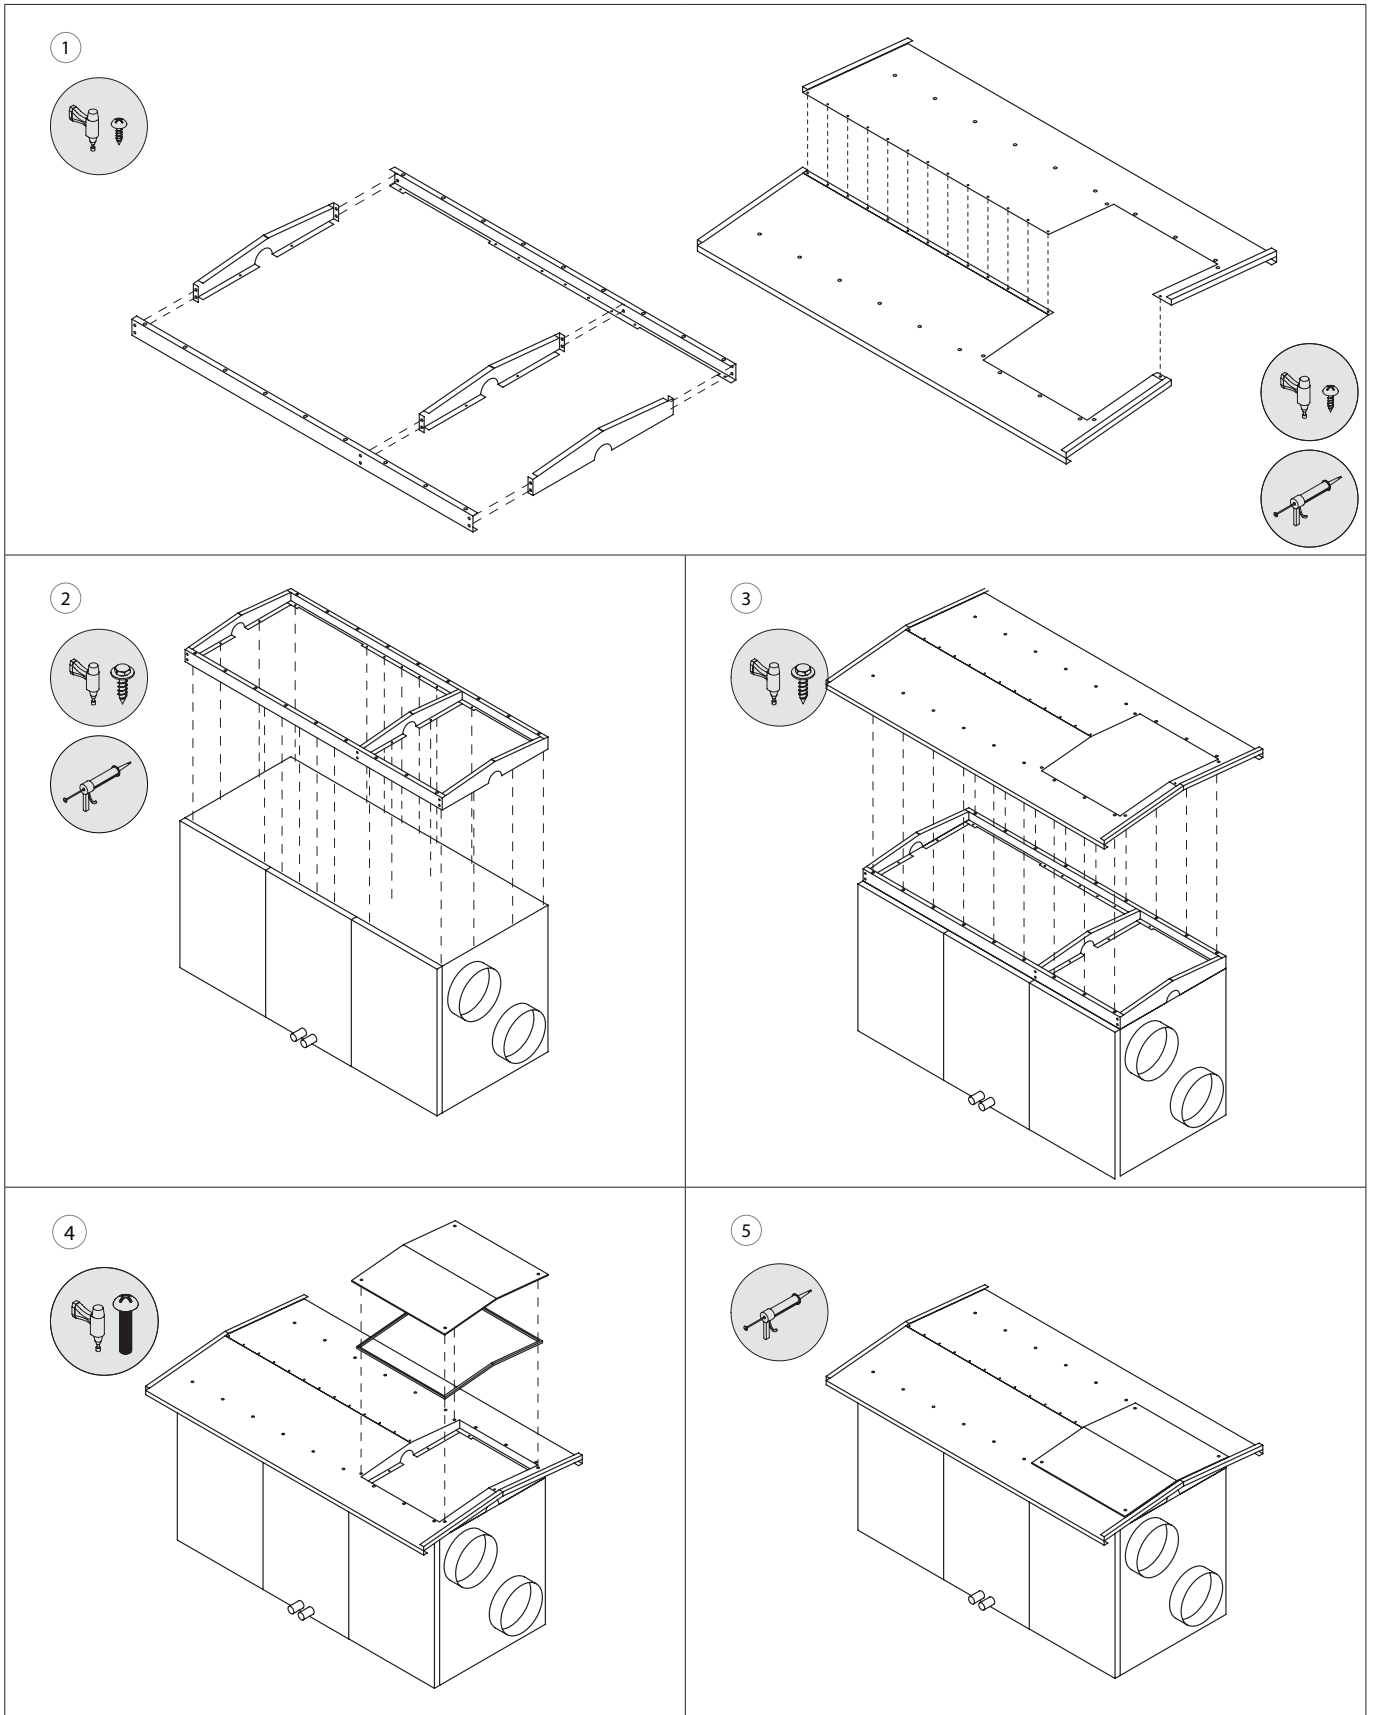 




Verso CF 2300

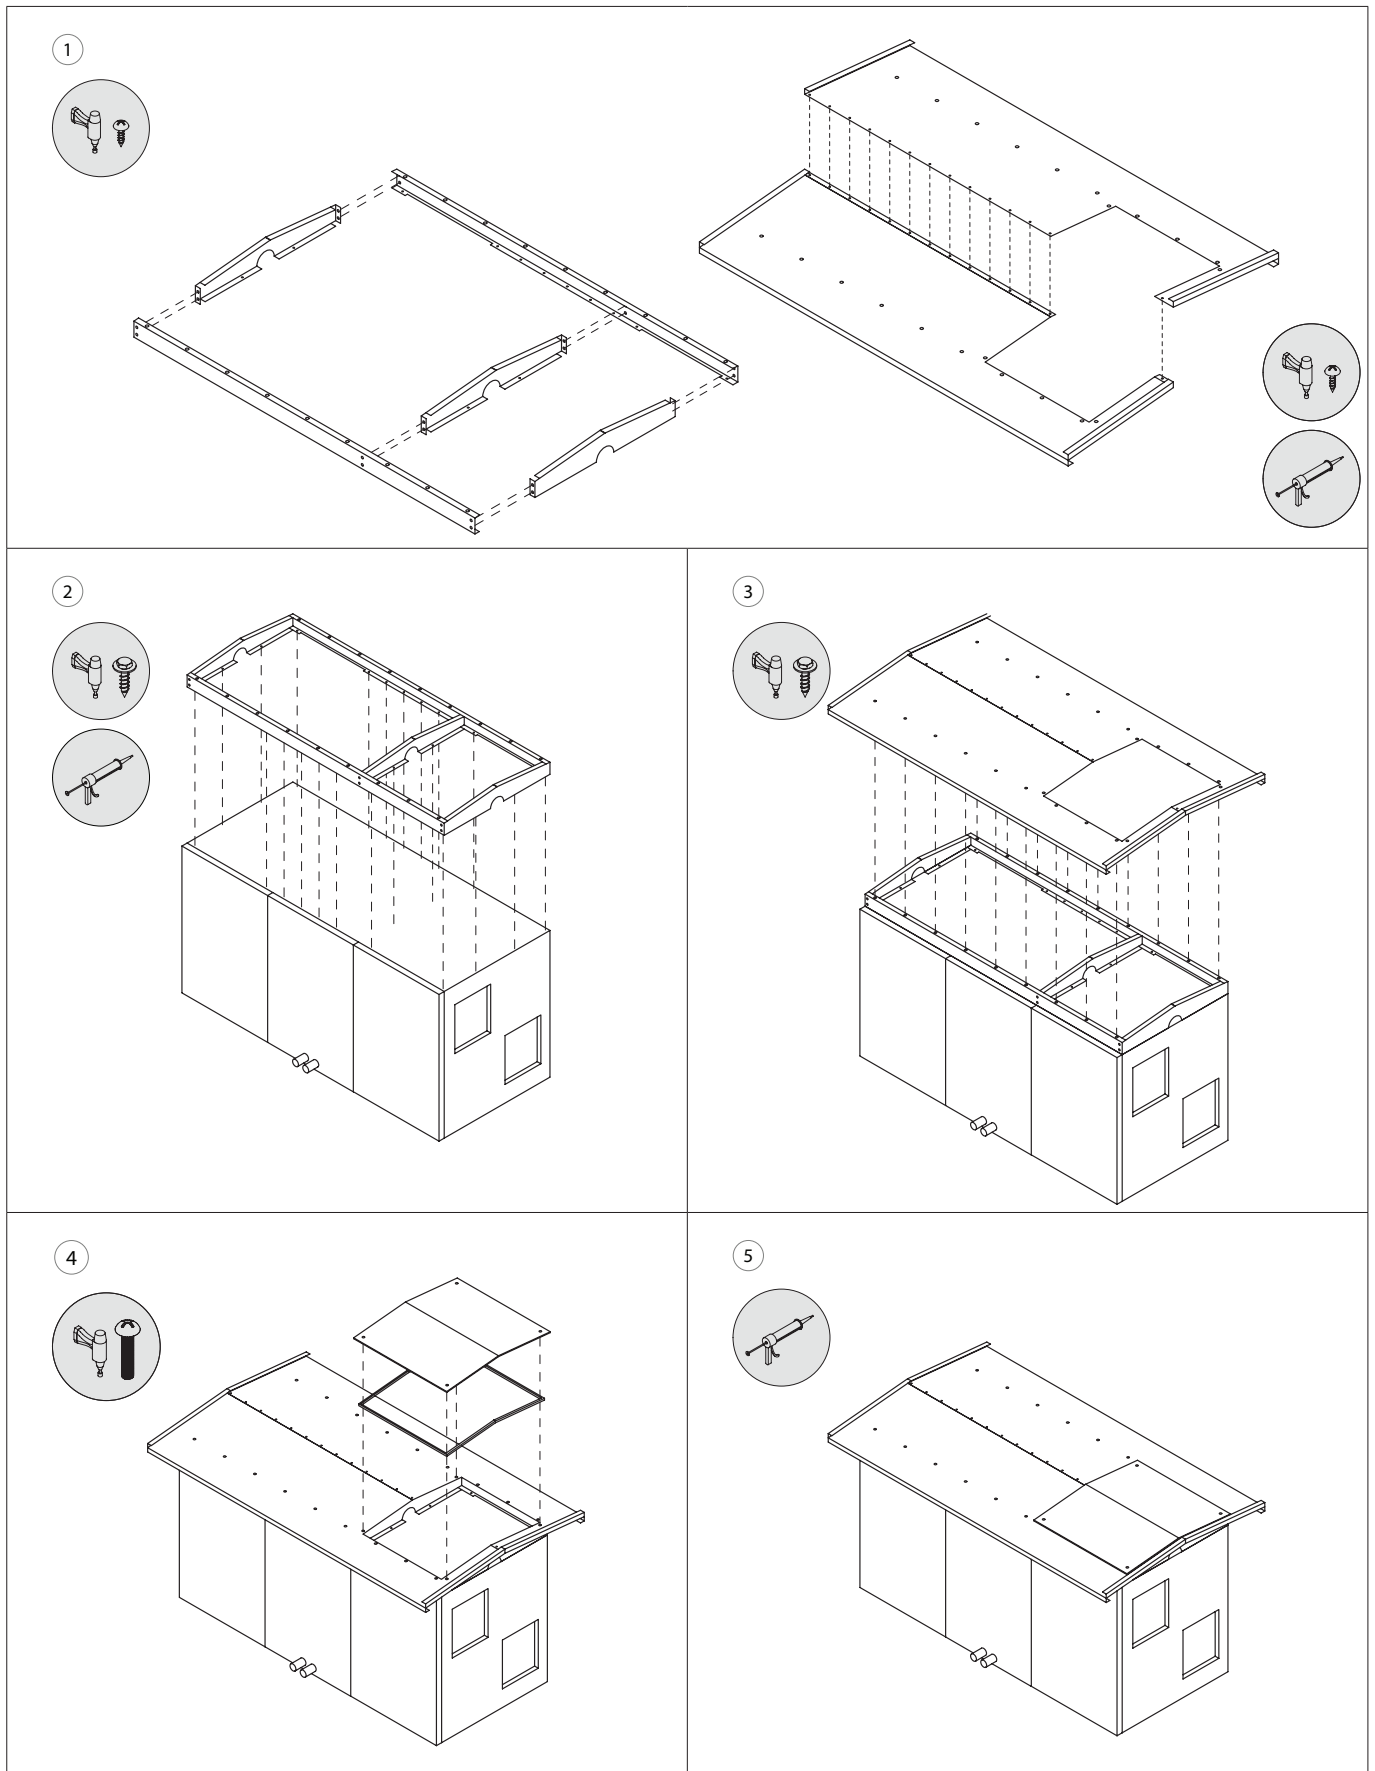 


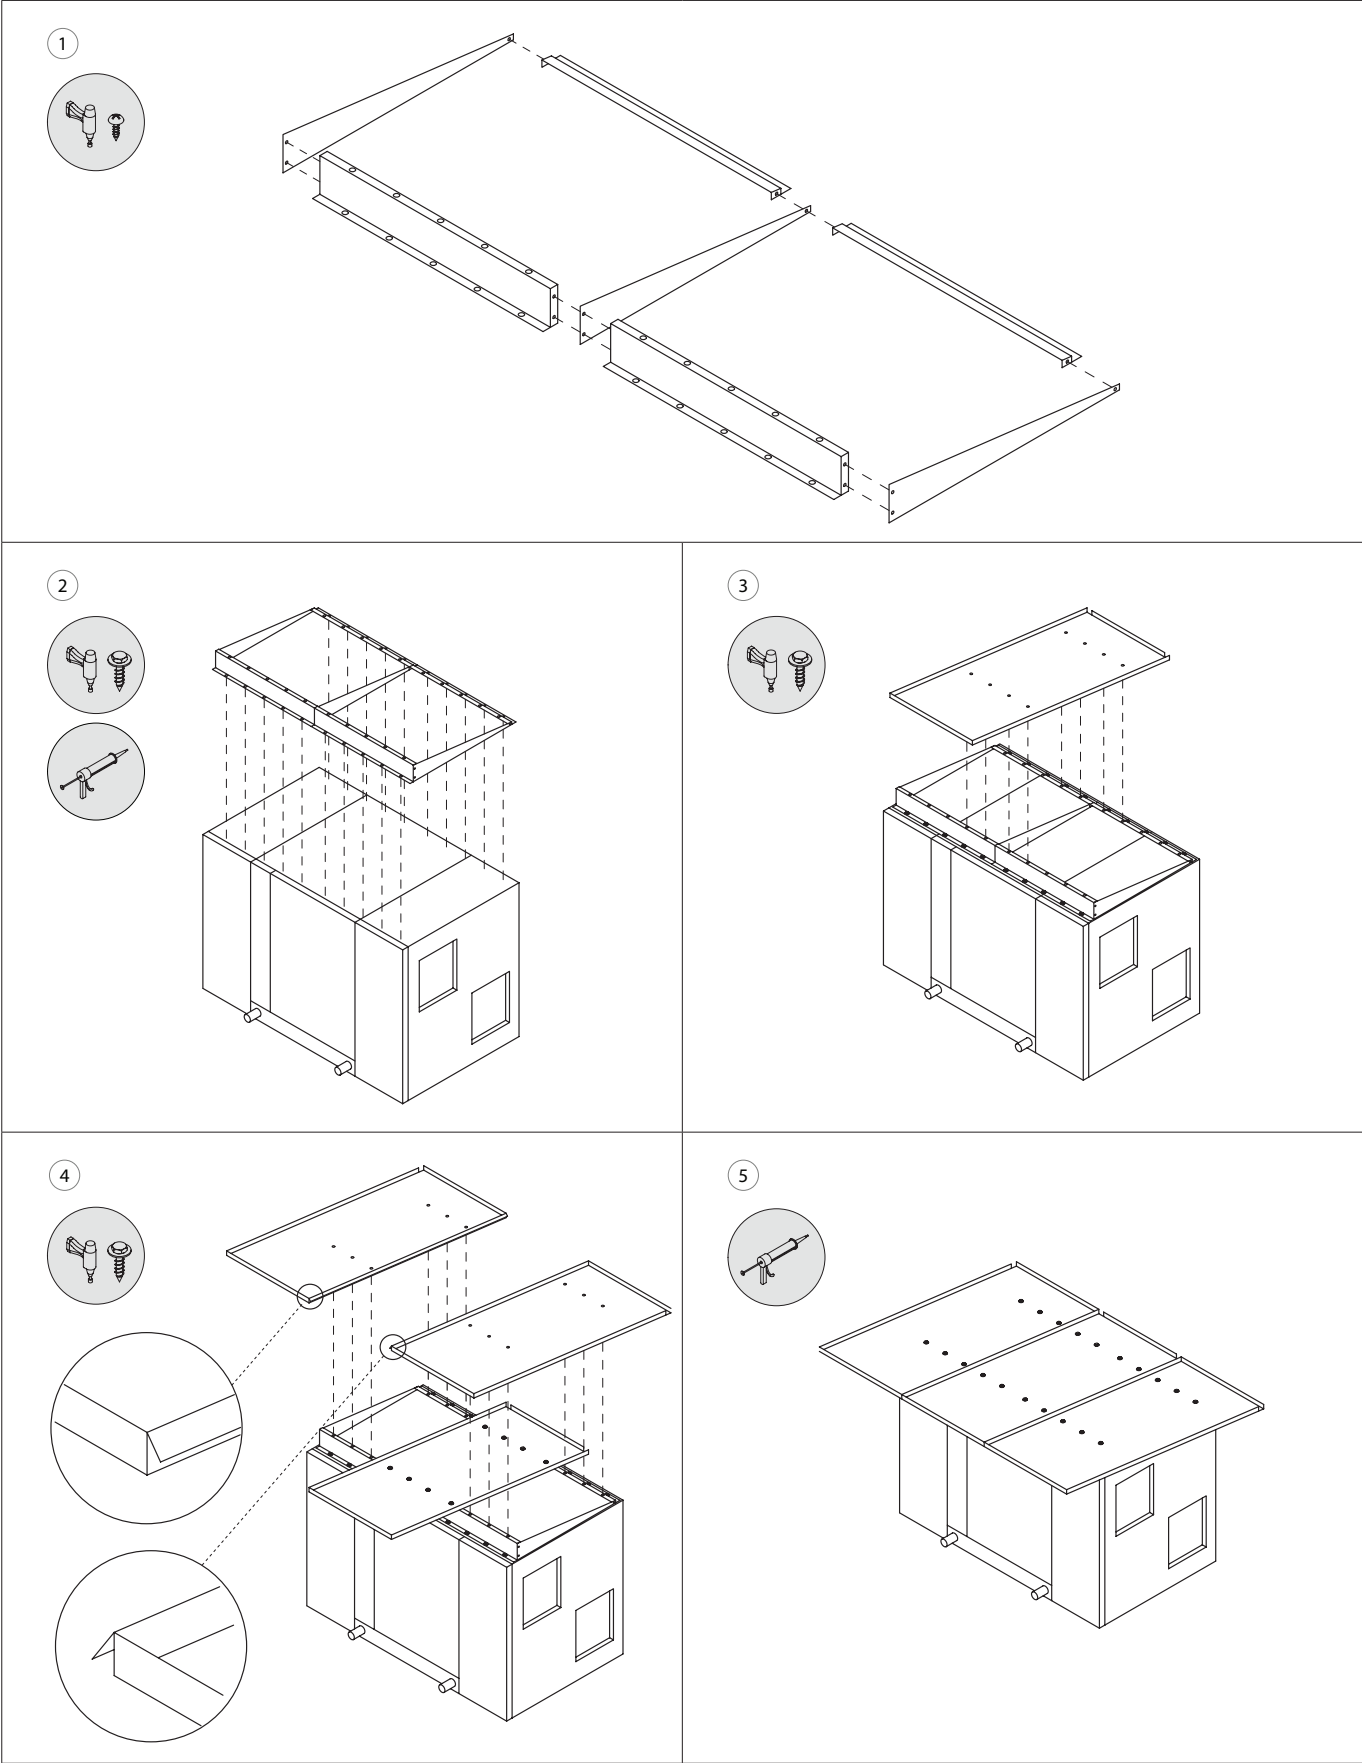 


**MOUNTING OF THE HOODS**




 
Verso R 1000 - R 1300 - R 1500  
Verso CF 1000 - CF 1300 - CF 1700

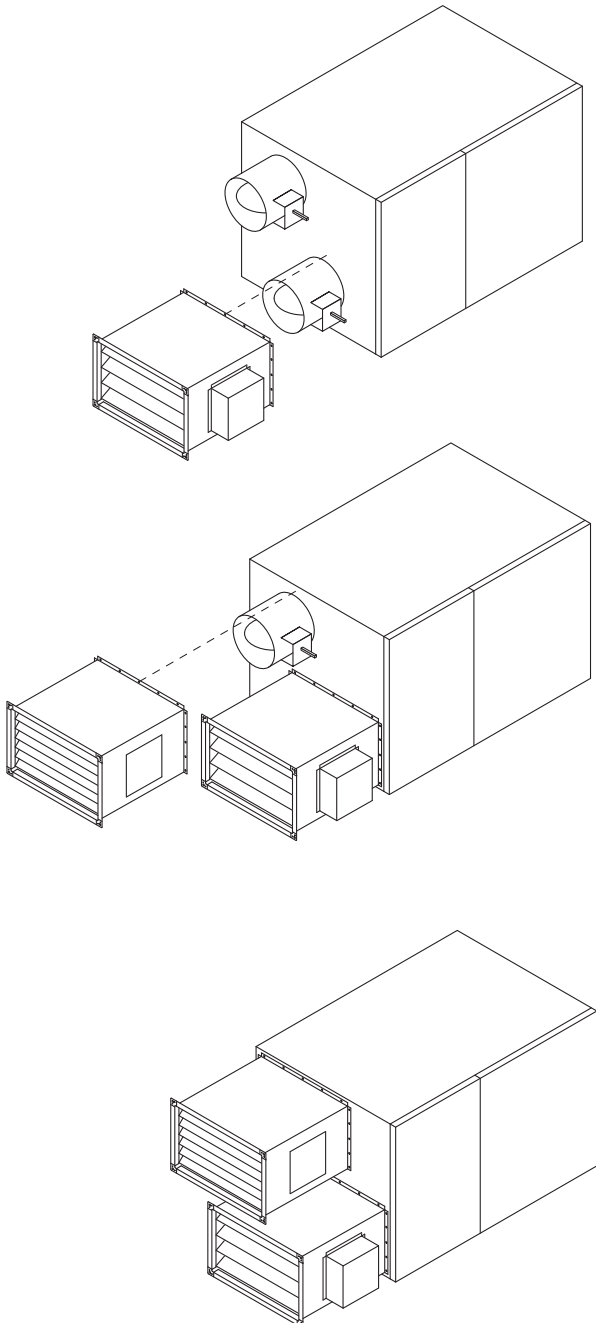





Verso R 1700 - R 2000

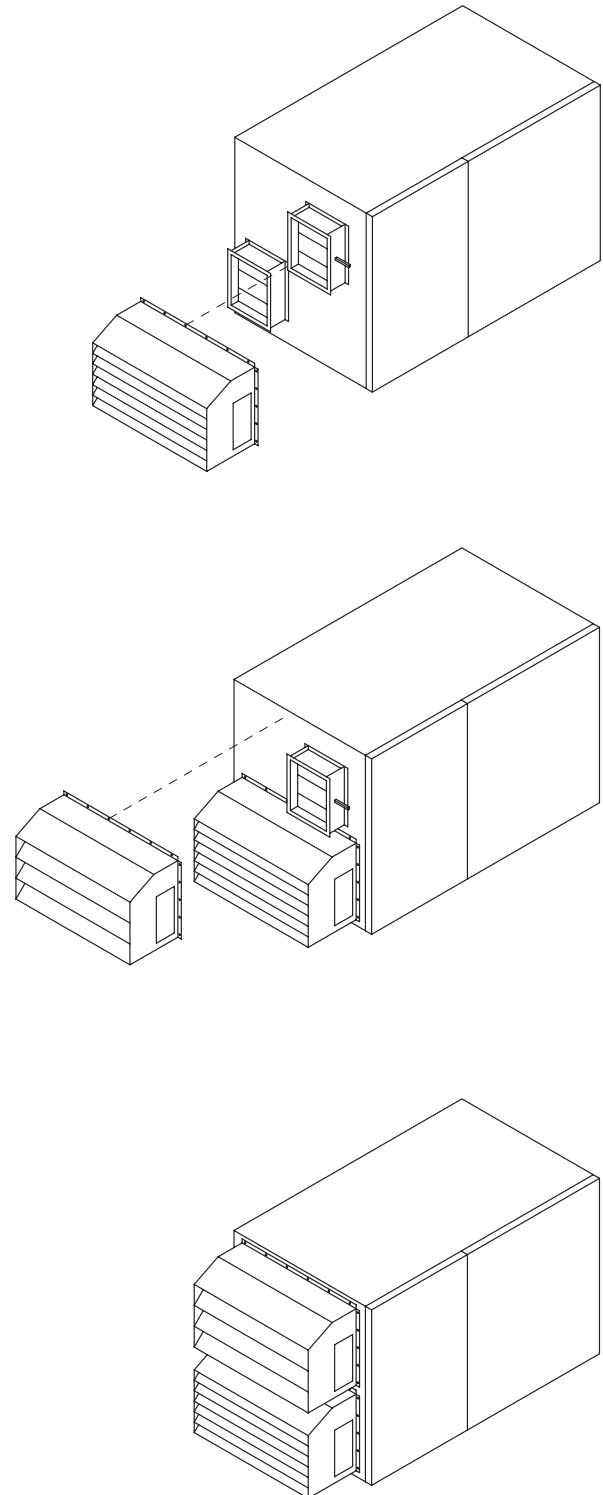  






Verso R 2500 - R 5000 - R 7000

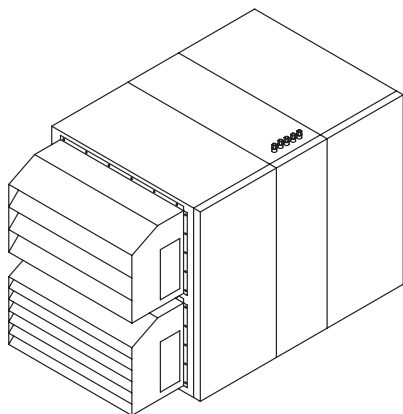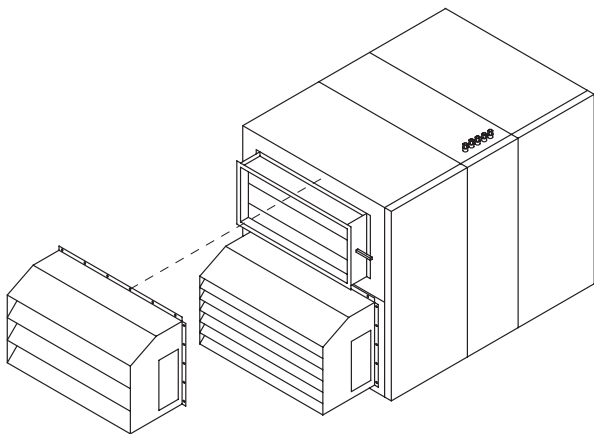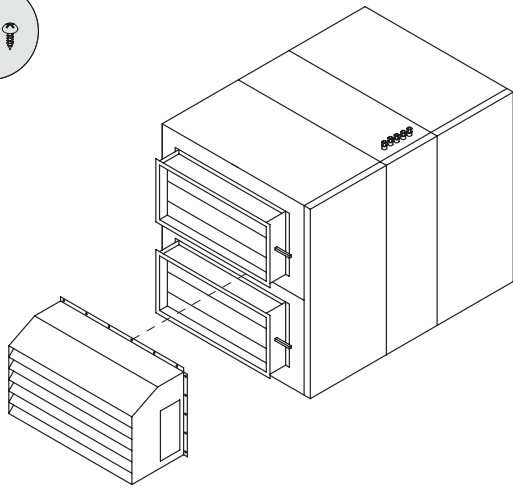    

Verso R 3000 - R 4000  
Verso CF 3500

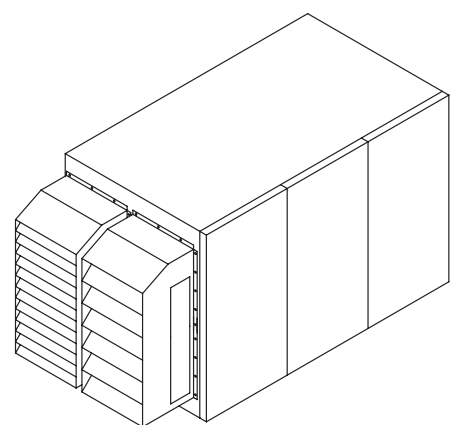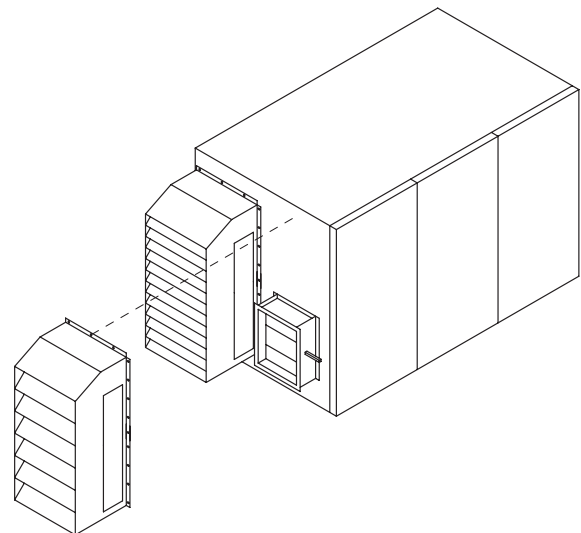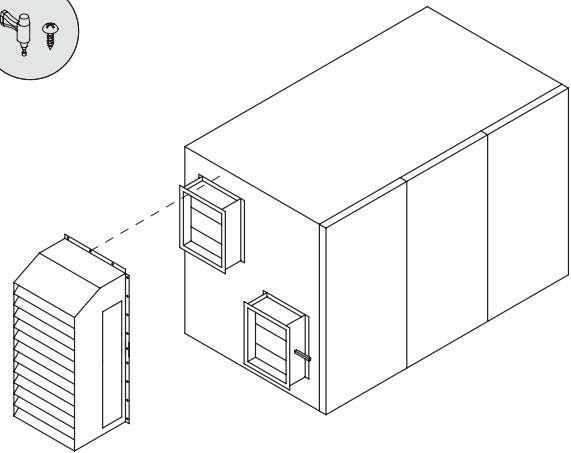    

Verso CF 2300

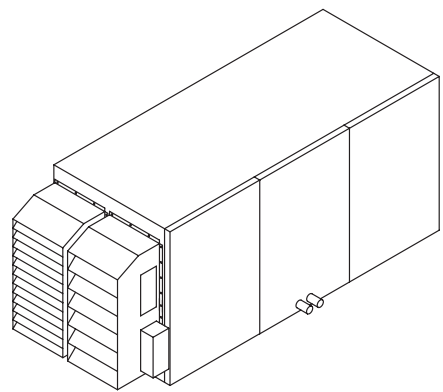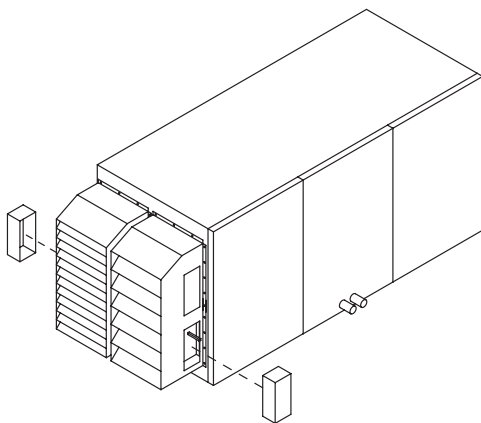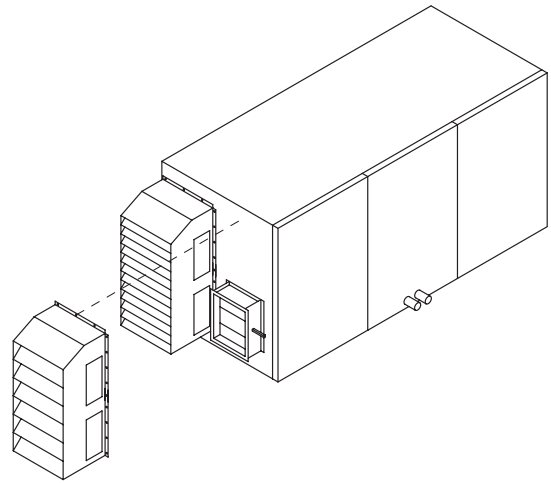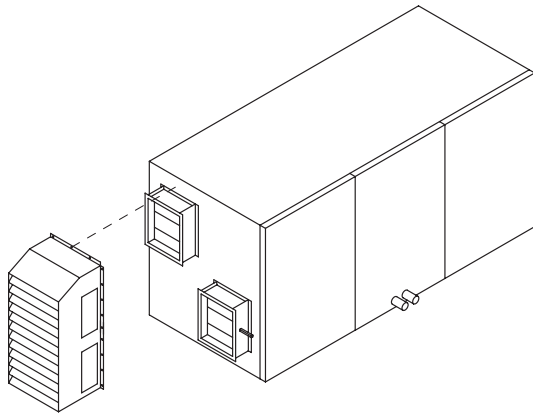     

## LITHUANIA

### UAB KOMFOVENT

#### TECHNINĖS PRIEŽIŪROS SKYRIUS / SERVICE AND SUPPORT

Phone: +370 5 200 8000  
Email: service@komfovent.com  
www.komfovent.com

## RUSSIA

### ООО «КОМФОВЕНТ»

Ул. Выборгская д. 16, стр. 1,  
2 этаж, 206 офис, Москва, Россия  
Тел. +7 499 673 22 73  
info.ru@komfovent.com  
www.komfovent.ru

### ООО «КОМФОВЕНТ»

Ряжское шоссе, 20 литера Е, пом Н6  
390017 г. Рязань, Россия  
Тел.: +7 491 255 95 71  
info.ru@komfovent.com  
www.komfovent.ru

## BELARUS

### ИООО «Комфовент»

ул. Уручская 21 – 423,  
220125 г. Минск, Беларусь  
Тел. +375 17 266 5297, 266 6327  
info.by@komfovent.com  
www.komfovent.by

## SWEDEN

### Komfovent AB

Ögärdesvägen 12B  
433 30 Partille, Sverige  
Tel. +46 31 487 752  
info\_se@komfovent.com  
www.komfovent.se

## FINLAND

### Komfovent Oy

Muuntotie 1 C1  
FI-01 510 Vantaa, Finland  
Tel. +358 0 408 263 500  
info\_fi@komfovent.com  
www.komfovent.com

## PARTNERS

AT	J. PICHLER Gesellschaft m. b. H.	www.pichlerluft.at
BE	Ventilair group	www.ventilairgroup.com
	ACB Airconditioning	www.acbairco.be
CZ	REKUVENT s.r.o.	www.rekuvent.cz
CH	WESCO AG	www.wesco.ch
	SUDCLIMATAIR SA	www.sudclimatair.ch
	CLIMAIR GmbH	www.climair.ch
DK	Øland A/S	www.oeland.dk
EE	BVT Partners	www.bvtpartners.ee
FR	ATIB	www.atib.fr
HR	Microclima	www.microclima.hr
HU	AIRVENT Légtechnikai Zrt.	www.airvent.hu
	Gevent Magyarország Kft.	www.gevent.hu
	Merkapt	www.merkapt.hu
IR	Fantech Ventilation Ltd	www.fantech.ie
IS	Blikk & Tækniþjónustan ehf	www.bogt.is
	Hitataekni ehf	www.hitataekni.is
IT	Icaria srl	www.icariavmc.it
NL	Ventilair group	www.ventilairgroup.com
	DECIPOLE-Vortvent	www.vortvent.nl
	CLIMA DIRECT BV	www.climadirect.com
NO	Ventilution AS	www.ventilution.no
	Ventistål AS	www.ventistal.no
	Thermo Control AS	www.thermocontrol.no
PL	Ventia Sp. z o.o.	www.ventia.pl
SE	Nordisk Ventilator AB	www.nordiskventilator.se
SI	Agregat d.o.o	www.agregat.si
SK	TZB produkt, s.r.o.	www.tzbprodukt.sk

## GERMANY

### Komfovent GmbH

Konrad-Zuse-Str. 2a,  
42551 Velbert, Deutschland  
Tel. +49 0 2051 6051180  
info@komfovent.de  
www.komfovent.de

## LATVIA

### SIA Komfovent

Bukaišu iela 1, LV-1004 Riga, Latvia  
Tel. +371 24 66 4433  
info@komfovent.lv  
www.komfovent.lv

### Vidzemes filiāle

Alejas iela 12A, LV-4219 Valmiermuiža,  
Valmieras pagasts, Burtnieku novads  
Tel. +371 29 358 145  
kristaps.zaicevs@komfovent.com  
www.komfovent.lv