



B1	Supply air temperature sensor	CW	Water cooler	HW	Water heater coil	S1	Heating water pump
B2	Extract temperature sensor	DK1, DK2	Frequency converter	HM	Humidifier	S2	Cooling water pump
B3	Outdoor temperature sensor	DX1,DX2,DX3	Direct expansion cooler	MS	Recirculation section	TG1	Hot water mixing valve actuator
B4	Exhaust temperature sensor	FG1	Supply air damper actuator	PF	Air filter	TG2	Cold water mixing valve actuator
B5	Return water sensor	FG2	Extract air damper actuator	PD1	Connection box	VP	Remote control panel
B6, B7	Air pressure sensor	FG3	Bypass air damper actuator	QS1	Main switch	V1	Supply air fan
B8	Airquality, CO ₂ sensor	FG4	Recirculation air damper actuator	RG1	Main controller	V2	Exhaust air fan
B9	Humidity sensor	HE1	Electric heater	RG2-RG4	Extension modules	FUNCTIONAL DIAGRAM VERSO PRO CF	
B14	Internal supply air temperature sensor	HE2	Electric heater	PR	Plate heat exchanger		